

1973 DUSTER



**WIRING DIAGRAM
MANUAL**

COMPONENT GRID LOCATOR

ZONE LOCATION


Air Conditioning Resistor Block	C36
Air Conditioning Clutch	E35
Alternator	B1
Battery	B2
Ballast Resistor	E3
Choke Control	D1
Choke Heater	E1
Cigar Lighter	A12
Distributor	C3
Electronic Ignition Control	D3
Engine Idle Solenoid	C1
Flashers:	
Hazard	B14
Turn Signal	A19
Fusible Link	B3, C3
Gauges:	
Ammeter	C3
Fuel	D7
Temperature	D7
Heater Resistor Block	A35
Horns	B15
Ignition Coil	C4
Lamps:	
Air Conditioning Switch Lamp	E40
Ash Receiver Lamp	D40
Back-Up Lamp—	
Left	D19, C21, D22
Right	D18, C21, E22
Brake Warning Lamp	D6
Console Lamp	C14
Dome Lamp	C12
Gearshift Selector Lamp	E38
Glove Box Lamp	D12
Headlamp—	
Left	D12
Right	E16
High Beam Indicator Lamp	D13
Ignition Switch Lamp	D10
Instrument Cluster Lamps	C15, C16
License Lamp	C18, B21, C23
Map Lamp	D12
Oil Pressure Indicator Lamp	D6
Park and Turn Signal Lamp—	
Left	D14
Right	E18





ZONE LOCATION


Reverse Gear Indicator Lamp	D27
Seat Belt Warning Lamp	B7
Side Marker Lamp, Front—	
Left	D13
Right	E19
Side Marker Lamp, Rear—	
Left	C18, B22, D23
Right	C18, B22, D23
Tail, Stop and Turn Signal Lamp—	
Left	B18, B21, C23
Right	D18, C21, D22
Trunk Lamp	B12
Turn Signal Lamp, Front—	
Left	D14
Right	E18
Turn Signal Indicator Lamp, Inst. Panel	A18
Turn Signal Indicator Lamp, Fender—	
Left	D15
Right	E18
Motors:	
Air Conditioning Blower Motor	D36
Heater Blower Motor	A36
Rear Window Defogger Blower Motor	D34
Starter Motor	B3
Windshield Washer Motor	A31
Windshield Wiper Motor (2-Speed)	B29
Windshield Wiper Motor (3-Speed)	B31
Radio	D38
Rear Window Defogger Blower Motor Resistor	D34
Relays:	
Heated Rear Window Relay	B6
Horn and Key-In Buzzer Relay	B13
Seat Belt Relay	D8
Starter Relay	B4
Time Delay Relay	D11
Seat Belt Buzzer	B6
Sending Units:	
Fuel	E8
Temperature	E7
Speakers:	
Front	A37
Rear	A39

ZONE LOCATION

Switches:	
Air Conditioning Blower Motor Switch	C35
Air Conditioning Low Pressure Switch	D34
Air Conditioning Temperature Control Switch	C34
Air Conditioning Vacuum Switch	B35
Automatic Transmission Neutral Start Switch	C25
Back-Up Lamp Switch:	
Automatic Transmission	C25
Manual Transmission	C26, C27
Brake Warning Switch	E6
Clutch Start Switch	C4
Defroster Switch	C34
Door Switch—	
Left	D10
Right	E10
Fader Control Switch	B38
Foot Dimmer Switch	E14
Glove Box Lamp Switch	D12
Handbrake Release Switch	E6
Hazard Flasher Switch	A15
Headlamp Switch	C10
Heated Rear Window Switch	B5
Heater Blower Switch	A34
Horn Switch	B14
Ignition Switch	B10
Key Switch	D11
Low Oil Pressure Switch	E6
Map Lamp Switch	E12
Neutral Starter Switch	C25
Rear Window Heater Switch	B5
Seat Belt Retractor Switch—	
Left	D8
Right	B7
Seat Switch—Right	B8
Start and Ignition Switch	B10
Stop Lamp Switch	A13
Trunk Signal Switch	C12
Turn Signal Switch	B15
Windshield Washer Switch	C31
Windshield Wiper Switch (2-Speed)	D29
Windshield Wiper Switch (3-Speed)	D31
Voltage Limiter	C7
Voltage Regulator	C2

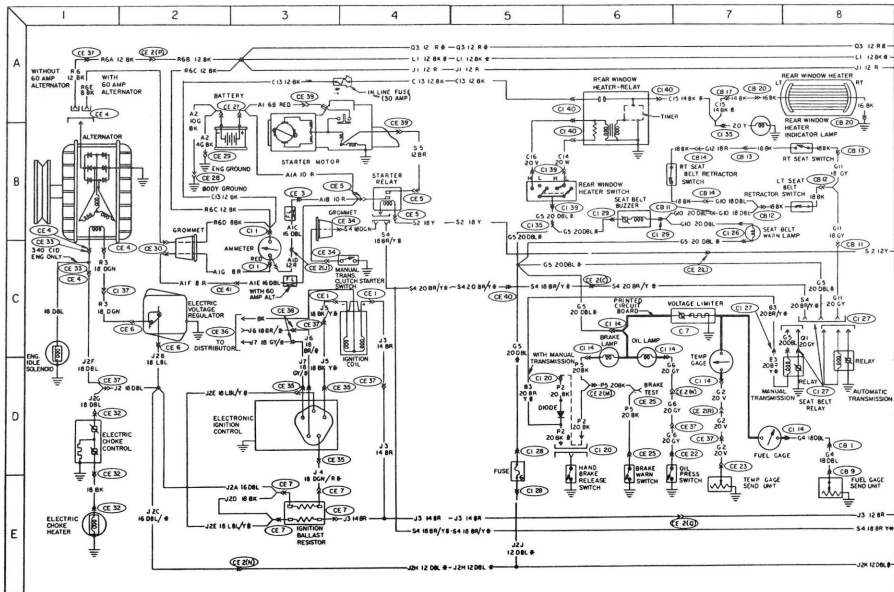

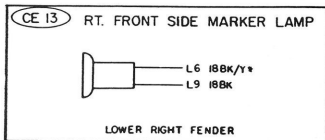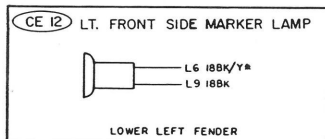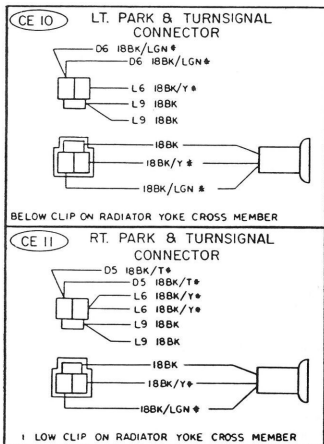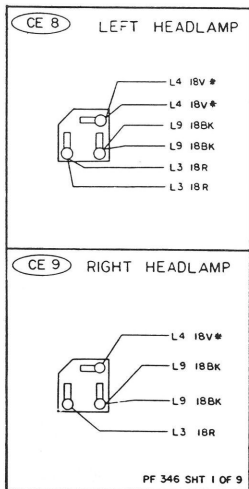

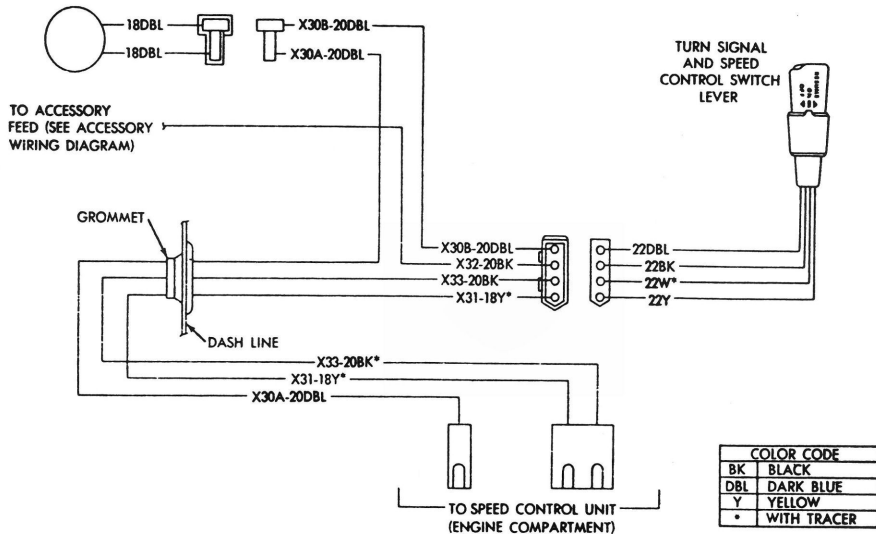

1973 SPEED CONTROL WIRING